


TEKTRONIX 571 Curve Tracer


Move cursors **N-FET** Pmax = 2 Watt Vg/step = .1 V Nr of steps = 10  
Rload = .25 Ohm Offset = 1.800 V

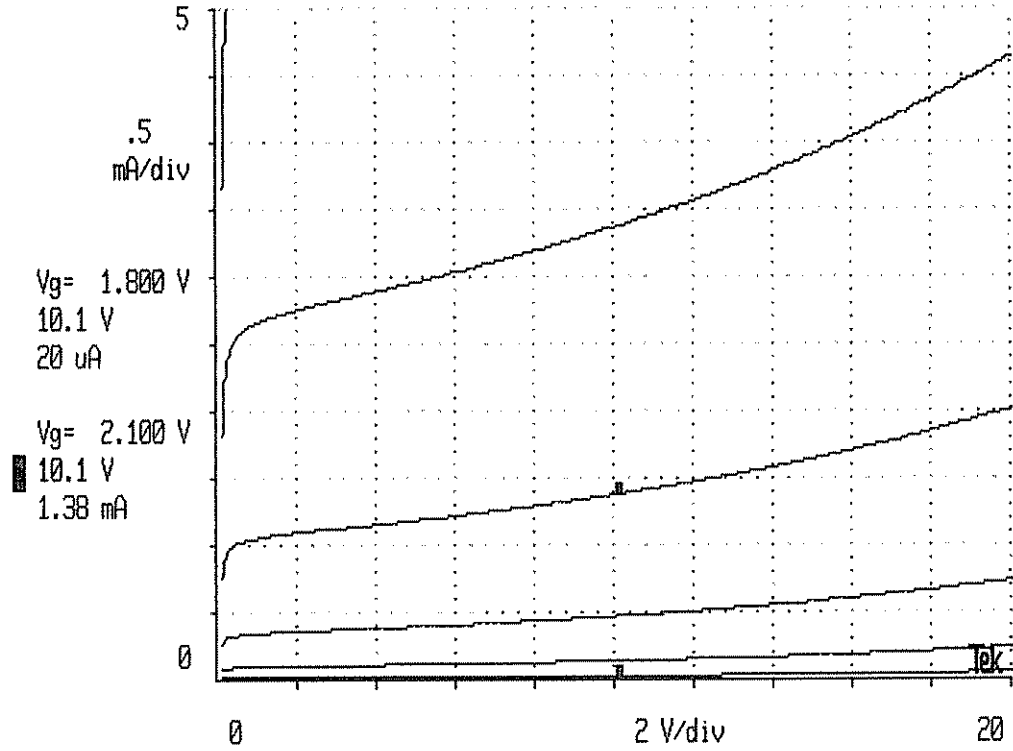

Screen copy (since power up) #1

TEKTRONIX 571 Curve Tracer

Move cursors **N=35** Pmax = 2 Watt Vg/step = .1 V Nr of steps = 10  
Rload = .25 Ohm Offset = 1.800 V

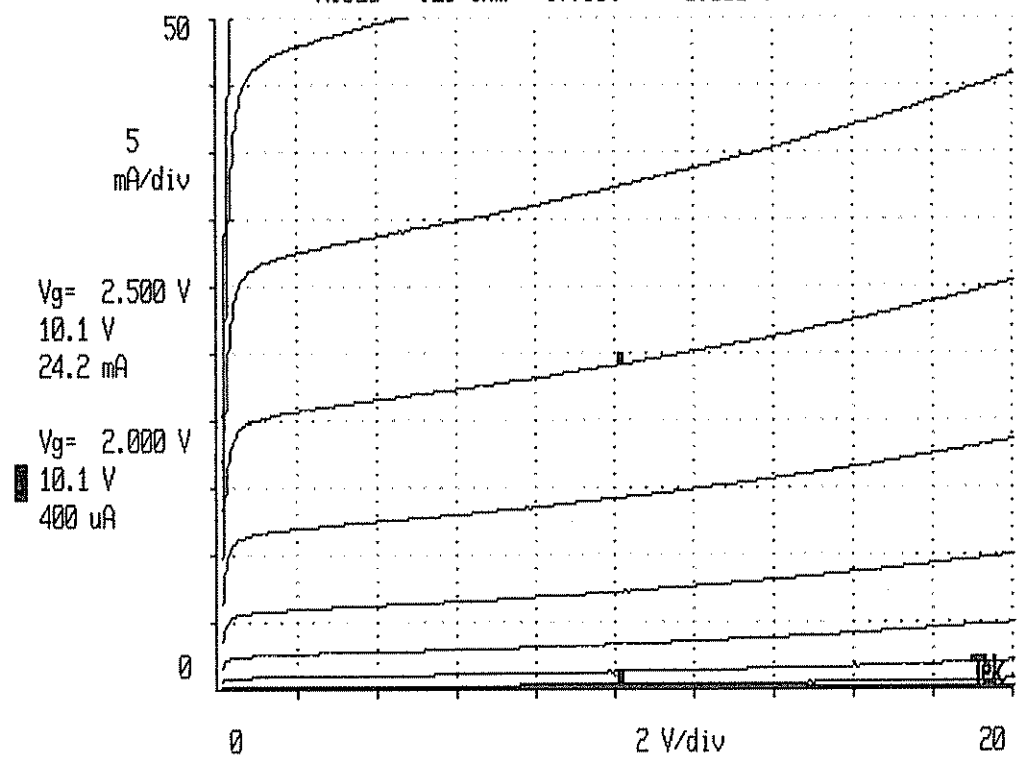

Screen copy (since power up) #2